



# Huawei Phone p7 Headphone Jack & Vibration Motor Assembly Replacement

Written By: Sophia





## TOOLS:

- [Heat Gun](#) (1)
- [Suction Handle](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)



## PARTS:


- [Huawei Ascend P7 headphone jack assembly](#) (1)

## Step 1 — Headphone Jack & Vibration Motor Assembly




- Remove back cover.

## Step 2

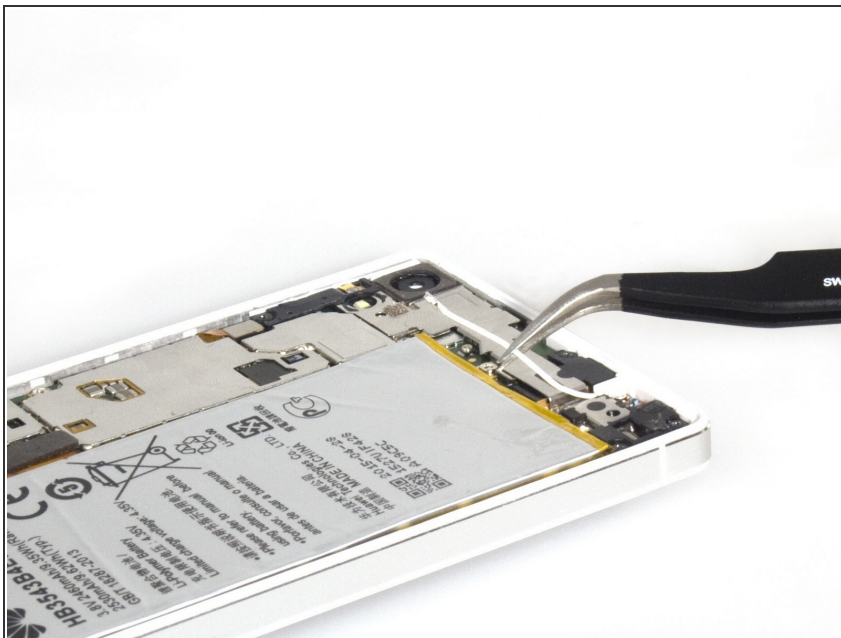

- Remove small signal cable.

## Step 3

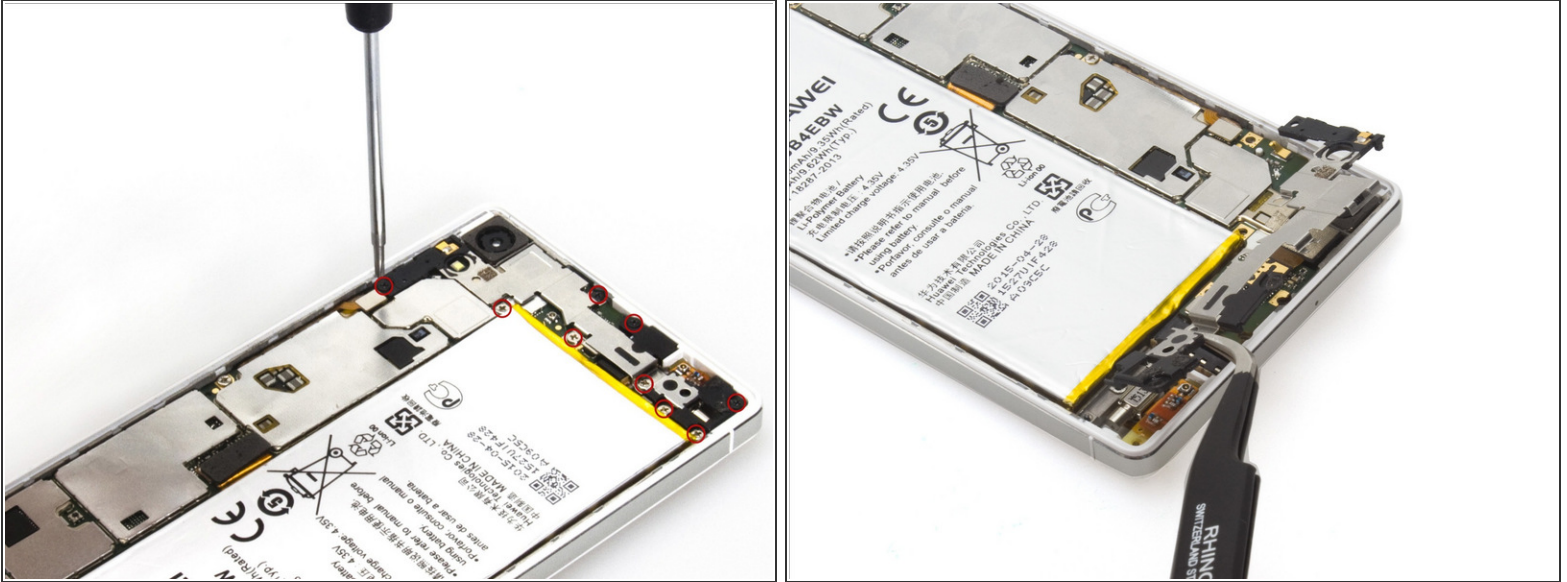

- Twist off those nine screws and remove the bracket.

## Step 4



- There is adhesive under the vibration motor, so release the connector and pry up to remove the assembly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 08:54:11 AM.